

Sveriges mest
kompleta leverantör
av rörlig
strömmatning

Sliprings type PMS

KranEl överför kraft i rörelse



Main performances

Housing	In aluminium, suitable for installation in inside or outside area
Positioning	In vertical axis, with threaded pipe at the bottom
Connections	Rings wired with 2 m. long cable
Cable entry	Inside the fastener pipe for the rings and through the PG21 cable entry for the brush holders
Brushes	20 A or 50 A copper graphite / silver graphite for signals
Executions	From 6 to 30 rings 20 A - mixed executions 20/50 A
Armonized rules	EN 60947 - 5 - 1 EN 60529 2006/95/CE - 2004/108/CE - 2006/42/CE
Marking	CE

Functional features

Nominal voltage	660 V ac—dc
Nominal current	Ith 20 A - 50 A
Protection degree	IP 55
Max rotation speed	30 revs/min
Test voltage	2,5 kV
Operating temperature	- 20 °C — + 60 °C

Accessories

Availability on demand

- Mercotac
- Absolute Encoder
- Micro-switches application
- Passage for air

Standard types

Type	20 A N° Rings	H = mm
G PMS B6	6	91
G PMS B10	10	91
G PMS B16	16	141
G PMS B20	20	141
G PMS B26	26	192
G PMS B30	30	193



Availability on demand:

- Types with 50A rings
- Mixed executions with 50 A / 20 A rings
- Flat bottom version without housing pipe
- Signal versions with gold or silver rings

Installation and wiring

The PMS slipring has to be installed only by qualified personnel in compliance with current safety standards. Power to the machine must be switched off before carrying out cabling. Connections are to be made in compliance with the wiring scheme of the controlled equipment. After installation has been completed, the installer is required to check that all commands are working properly. Avoid prolonged contact with oils and acids when using the equipment, as these may damage the products.

- 1) Using the locknuts (Ref. 27), attach the central pipe (Ref. 12) to a minimum 3 mm thick plate with a central hole of $\varnothing 48.5 \div 52.5$ mm (using the reducing cable clip on the nuts). As an alternative the central pipe (Ref. 12) can be attached to a plate with a threaded hole of $\varnothing 48$ mm, 1.5 mm pitch using the locknuts as jam nuts (Ref. 27).
- 2) Rotation is achieved thanks to 2 $\varnothing 10$ mm pivots (Ref. 24) situated on the base (Ref. 10) at a distance of 160 mm from each other. We recommend the coupling to be made with slack to take up any possible runout during rotation. Rotation can also be achieved by attaching the base (Ref. 10) using the two pivots (Ref. 24) situated on the plate, thus enabling the central pipe to rotate by (Ref. 12) thanks to a suitable coaxial joint.
- 3) The cables are connected to the brushes through the pipe union PG21 (Ref. 26). During the tightening of the cables to the brushes, brush holders must be locked. Please ensure that the wires do not interfere with any moving parts. The cables connected to the rings protrude from the central pipe by approx 2 m (Ref. 12). Longer cables are available upon request.
- 4) Please check the equipotential of any surfaces not generally recommended to be used under voltage, and the ground connection using the cables provided.


Maintenance

A programme of periodical maintenance is required to be carried out to ensure that the PMS slipring is kept in perfect working order. All maintenance is to be effected by qualified personnel using only original spare parts. Any defective or altered parts must be replaced promptly, even outside the maintenance schedule, as they could impact on the safety of the device. In particular:

- 1) Disconnect from power source and wait until the internal parts have cooled down.
- 2) Remove the cover (ref. 5).
- 3) Check the brushes for wear and tear, and check that they adapt properly to the rings.
- 4) Remove copper-graphite dust with de-humidified compressed air or a clean brush.
- 5) Check tightness of cables.
- 6) Check that the cover seal is in good condition.
- 7) Replace the cover (ref. 5)

Please note that the guarantee does not cover any equipment whose parts have been modified and tampered.

Dimensions

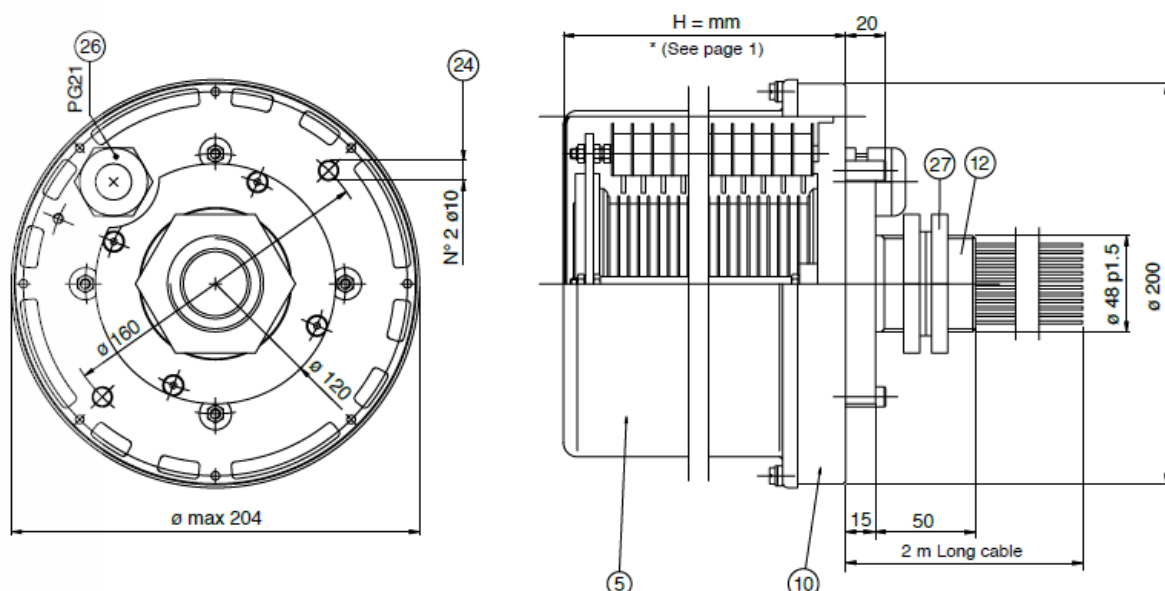

Vår erfarenhet är din
driftsäkerhet och
konkurrenskraft

Ditt mål är vårt

Vårt mål är att ni ska få ut mer av er anläggning eller maskin och bli mer konkurrenskraftig. Ökad konkurrenskraft tror vi uppnås delvis genom en optimal funktion, problemfri drift samt minskade drift- och underhållskostnader. Därför erbjuder vi allt från reservdelar till helhetslösningar med effektiv logistik.

Helhetslösning

Vi hittar den optimala lösningen för er, gärna redan på utvecklingsstadiet.

Problemlösning

Problem med befintliga applikationer? Med vår långa erfarenhet kan vi lova att vi stött på liknande problem tidigare. Prata med oss så löser vi det.

Produkt

Vi ser till att du får det du behöver med snabbast möjliga leverans.

Reservdel

Ibland räcker det med en reservdel för att få anläggningen att rulla igen. Osäker på vilken del du söker? Vi hjälper dig hitta rätt produkt.

KranEl Göteborg

Vagnmakaregatan 14
415 72 Göteborg
Tel: +46 (0)31 340 90 70

Mail: office@kranel.se

KranEl Stockholm

Reprovägen 12
183 77 Täby
Tel: +46(0)8 756 00 95